



Sony Xperia Arc S Teardown

Just a quick view of the internals

Written By: Josh Thomas





Step 1 — Sony Xperia Arc S Teardown




- Pop the back and remove the battery
 - Remove the 6 screws from the back (2 x J00 & 4 x T7)
- After the screws are gone, spudge the plastic shielding away.

Step 2

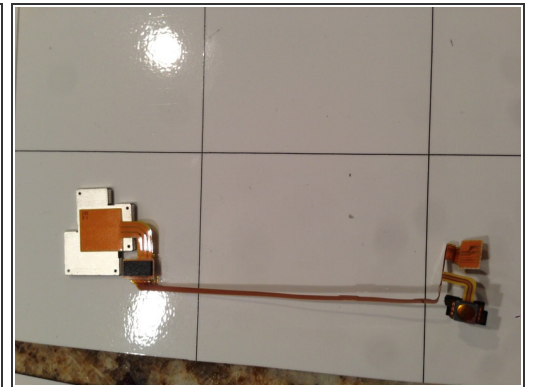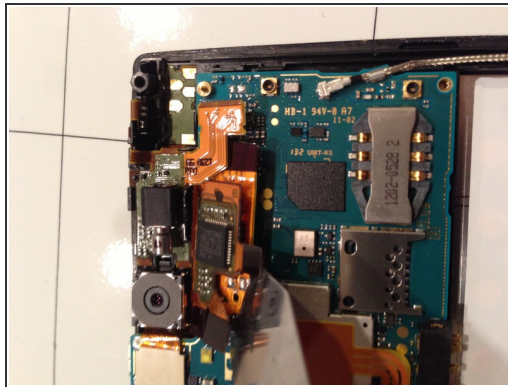

- Once the backplate is removed, no more screws or spudging needed!
- Pop out the cable connectors
- Remove the camera assembly

Step 3

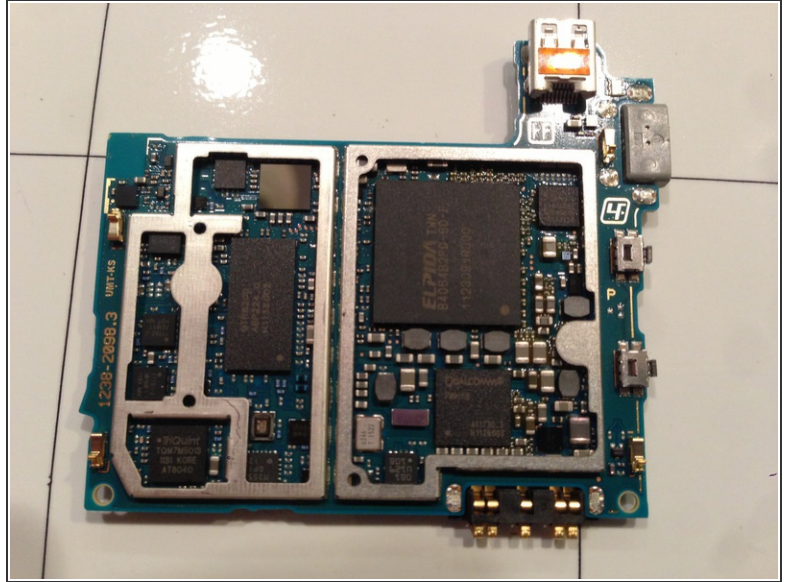

- Top and bottom of the board with shielding removed
 - Loving the pogo pins
- Charge not save

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:42:55 PM.